


NOTE: If vacuum function is front panel selected, change operational state; however if vacus oftware selected, V1-V3 change states.

LEAK C sample mode. n.

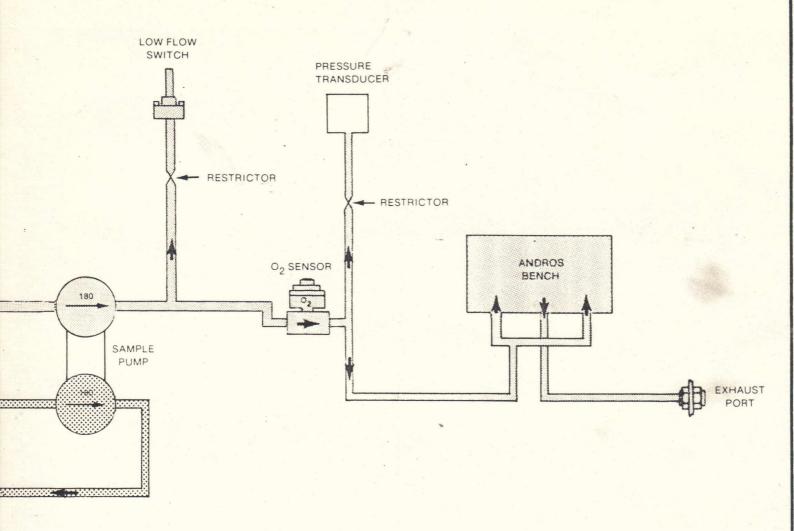

-	V1	V2	V3	V4	V5	
-	NC	NO	NO	NO	NO	

N.C N.C

					1																			
					SYM	DATE		REVISIONS		ECN	APVL													
						(DO NOT SCALE) TOLERANCES (ENCEPT AS NOTED)																		
SOL	ENOID	TRUTH	H TABL	E		CTIONS ±	DECI	MALS 000 = 005 00 = 815 0 =																
V1	V2	V3	V4	V5			On On	e Sun Parkwa																
NC	NO	NO	NO	NO	TITL		EA B B / Cry	stal Lake Illin	ois 60014 U.S	А														
.O. = SOLENOID DE-ENERGIZED .C. = SOLENOID ENERGIZED						MODEL MCA-3000, DIAGRAM 18-4 MATL AND/OR FINISH DWG BY//																		
																		СН	K BY		ENG APV	1		
																		SCA	u.E	SHT DWG SIZE OF B	NO. PA	GE 18 17/18		

-V3 do not m mode is